


INSTALLATION METHOD

Ribbon Display






INSTALLATION POSITION



660mm
26"

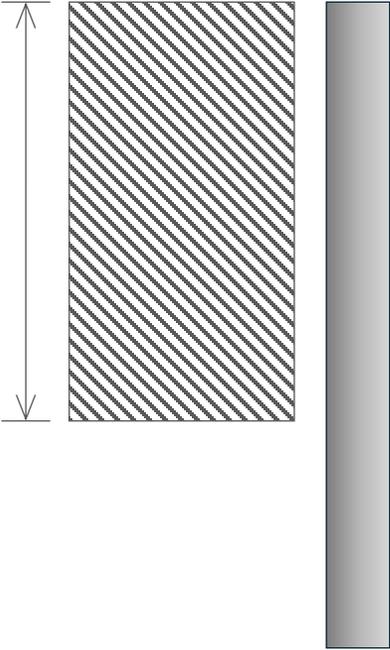



900mm
Ribbon Display

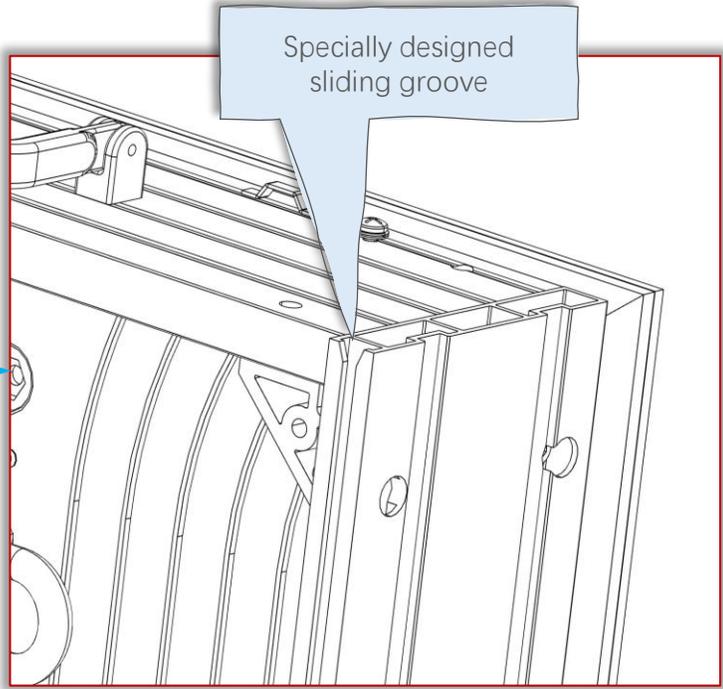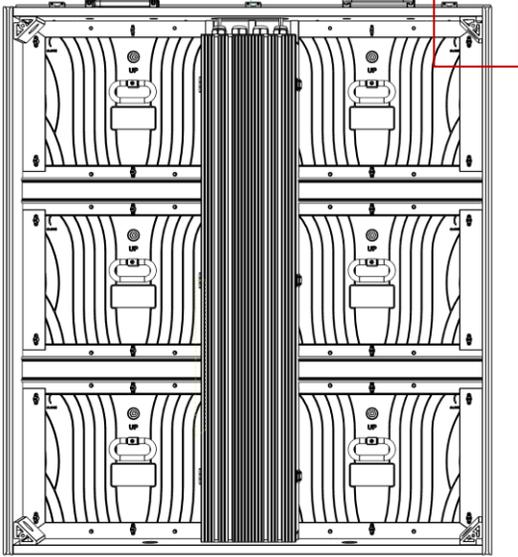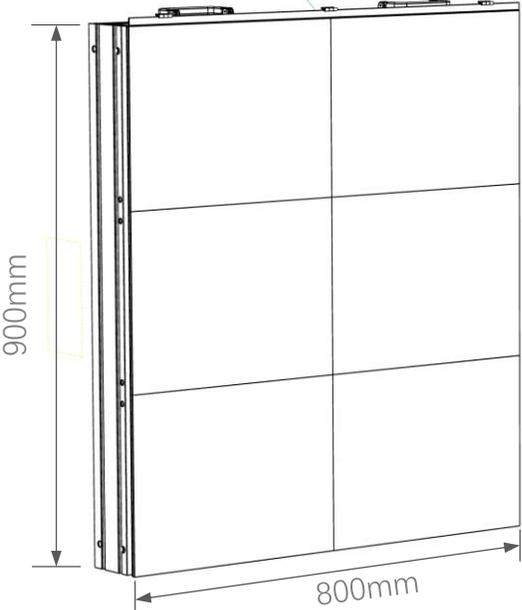


WALL FIXING COMPONENTS

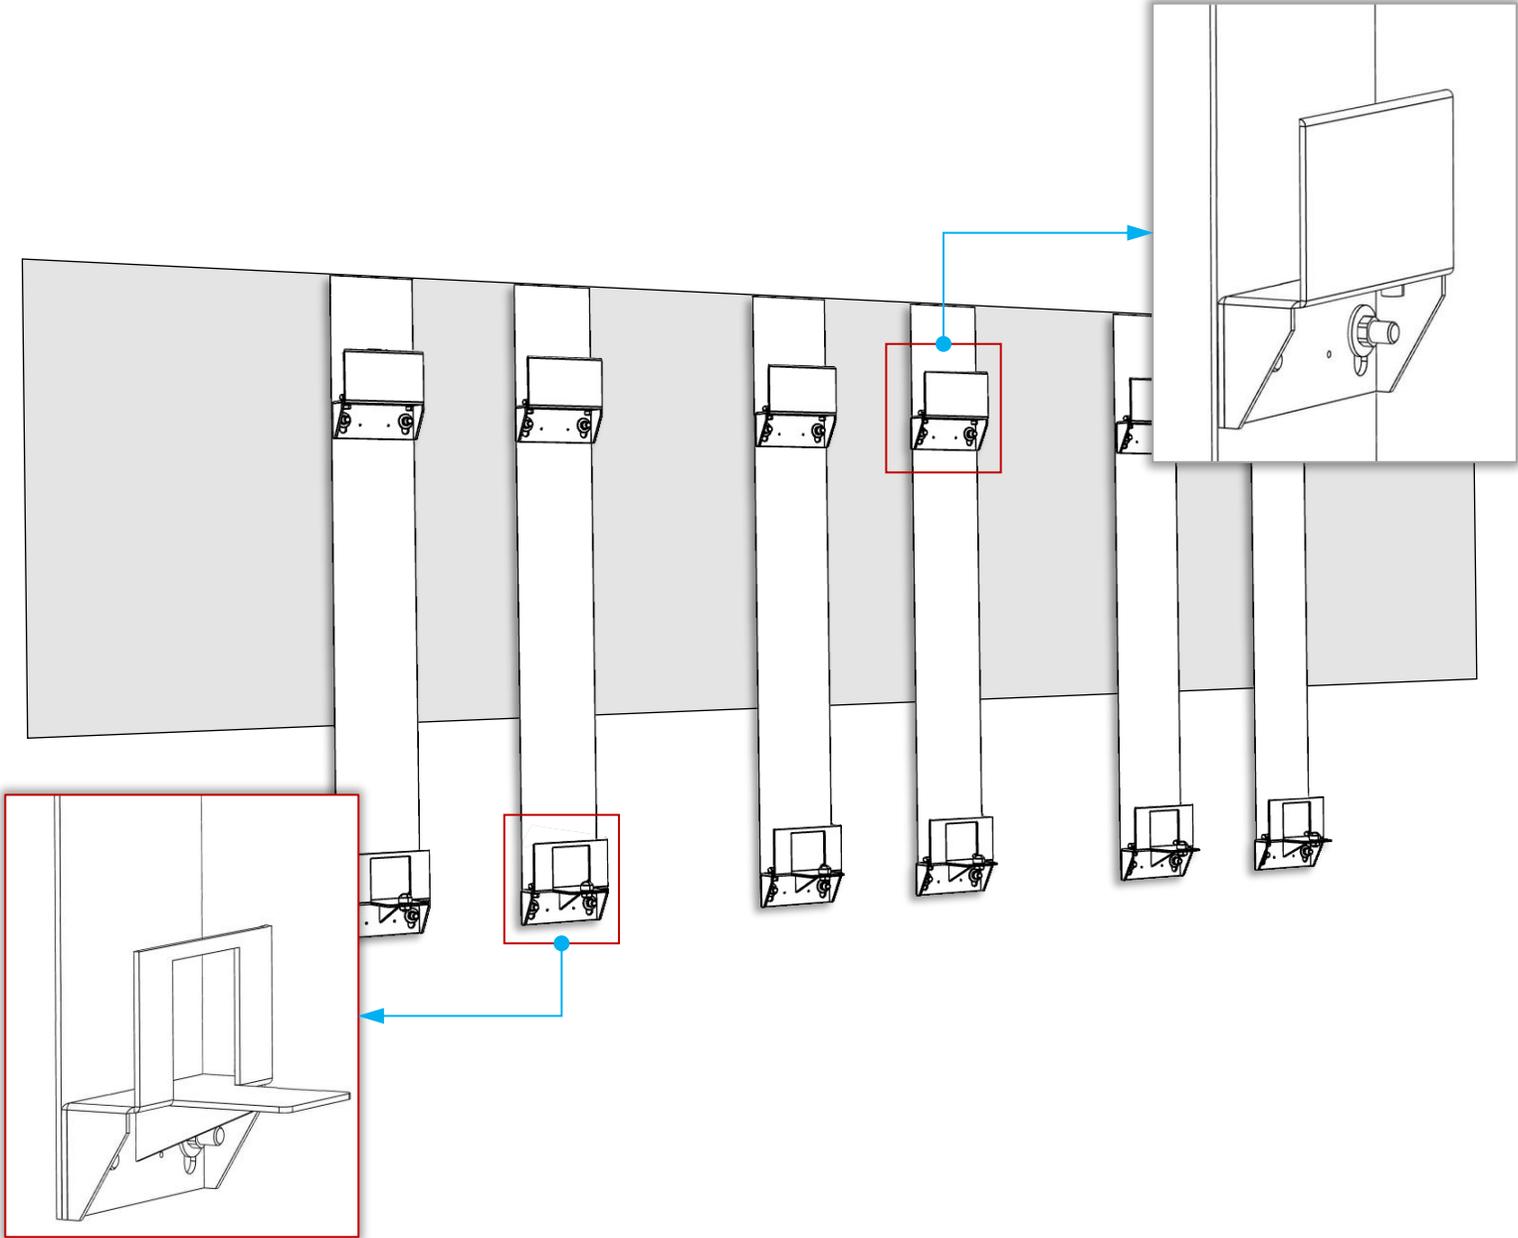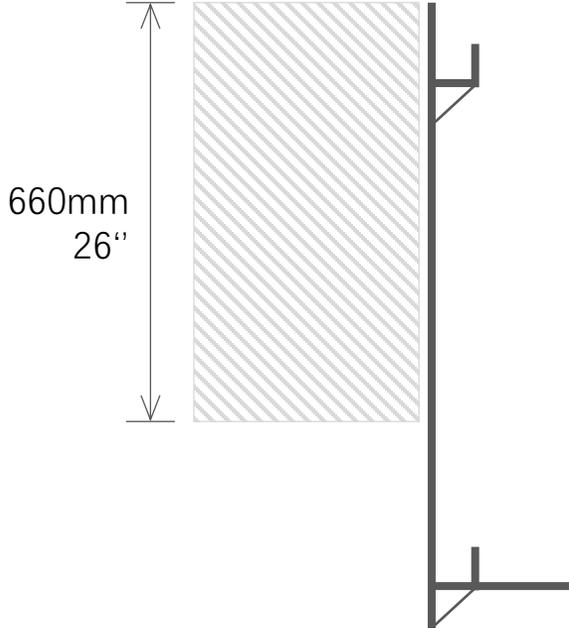


FIXED CROSSBEAM VERTICAL GROOVE

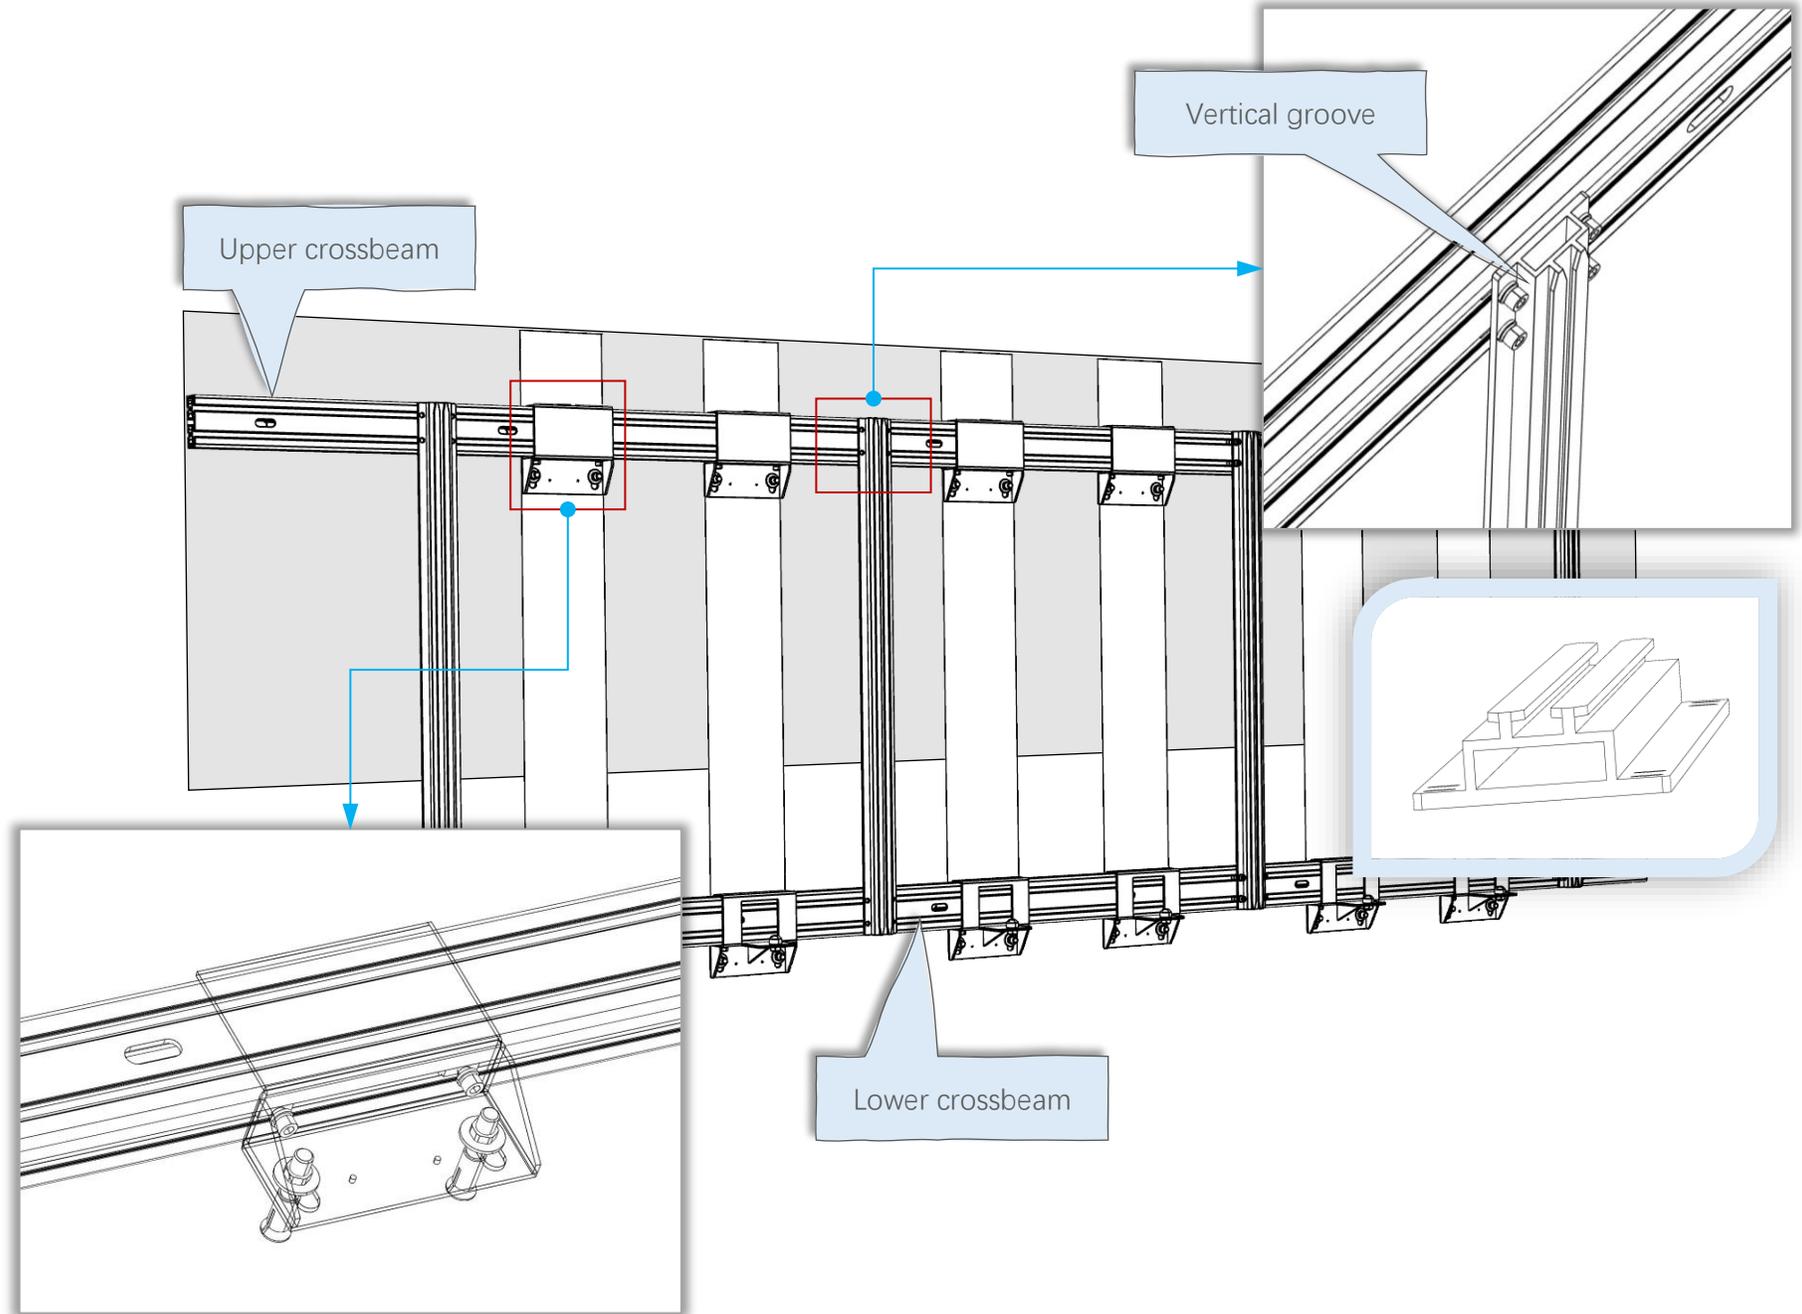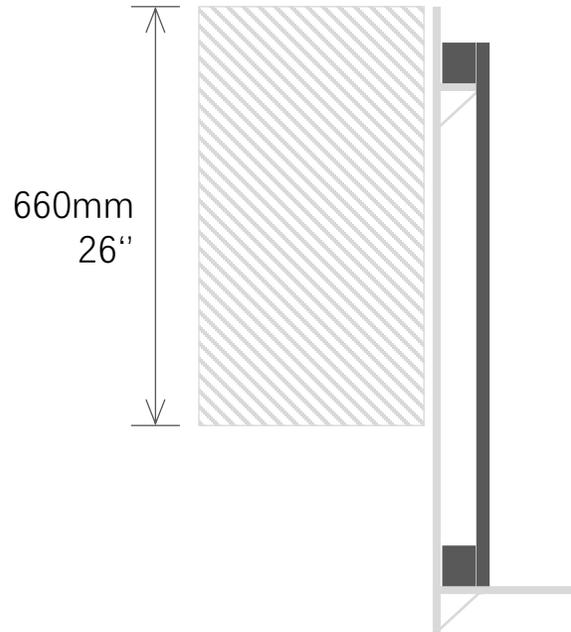



INSTALL THE CABINET

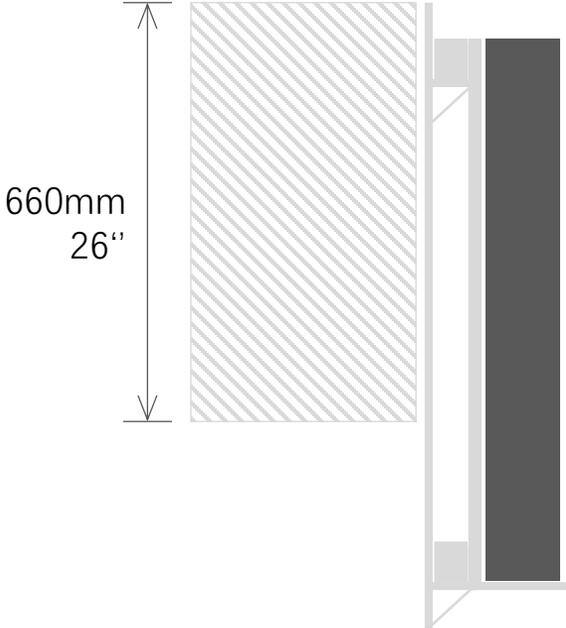




Slide the cabinet into the vertical groove from top to bottom

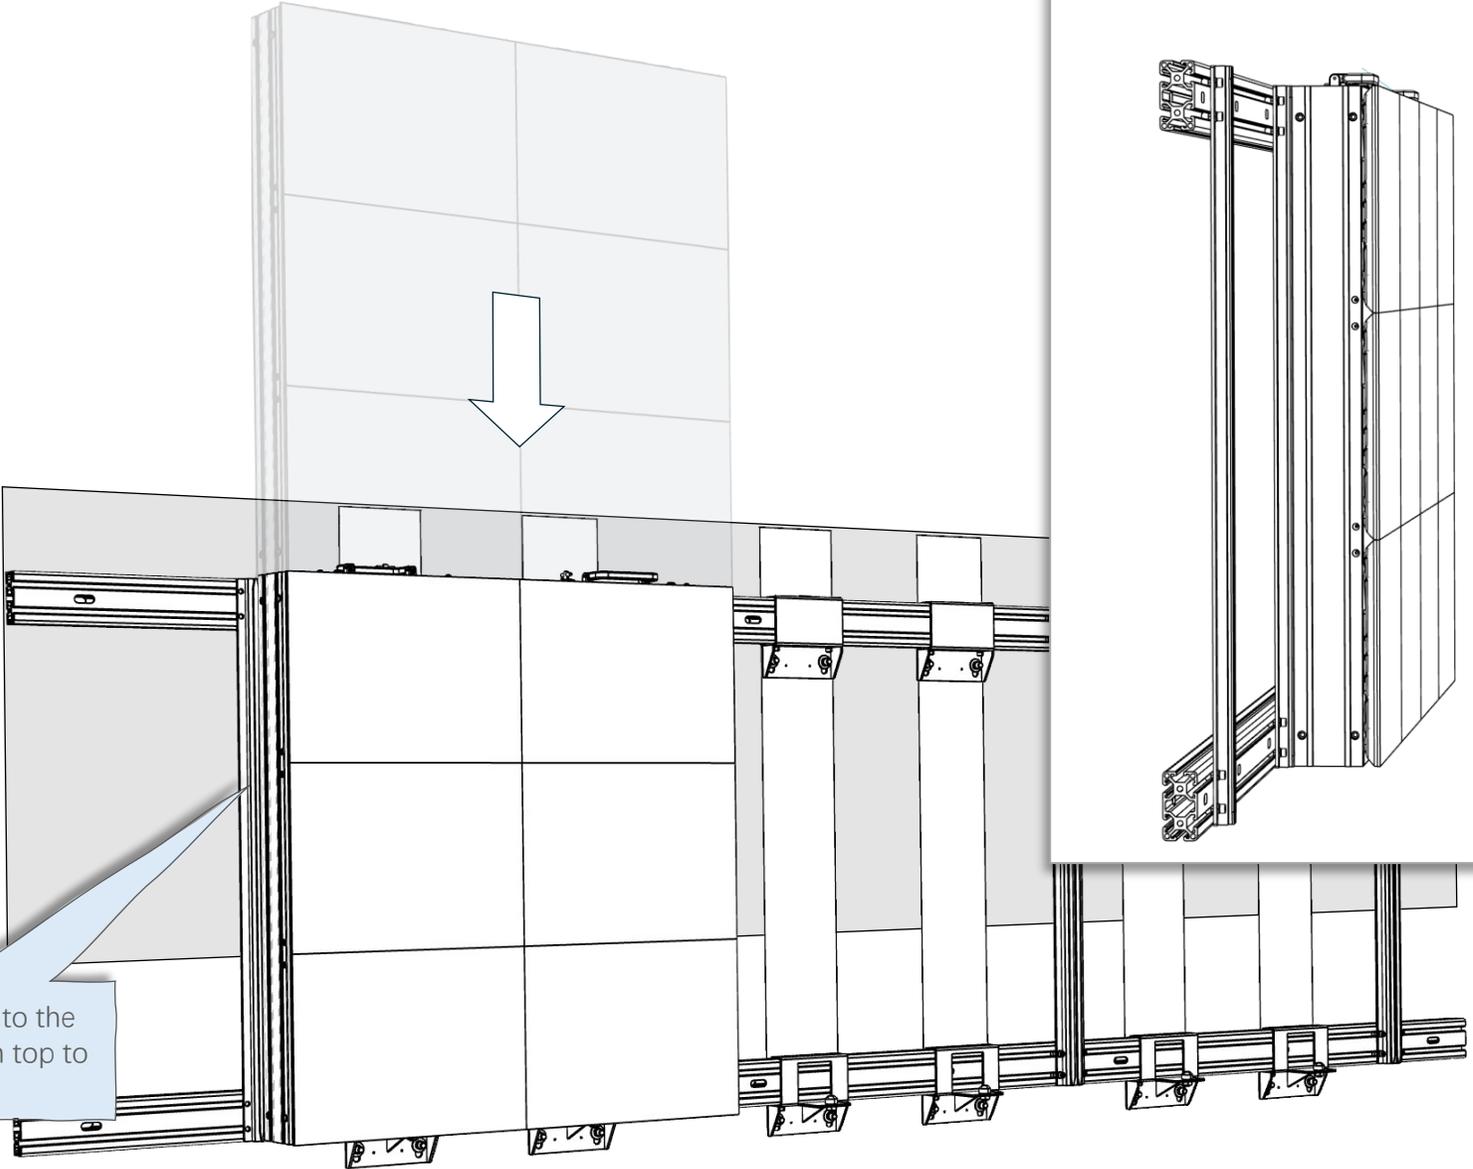

INSTALL THE CABINET

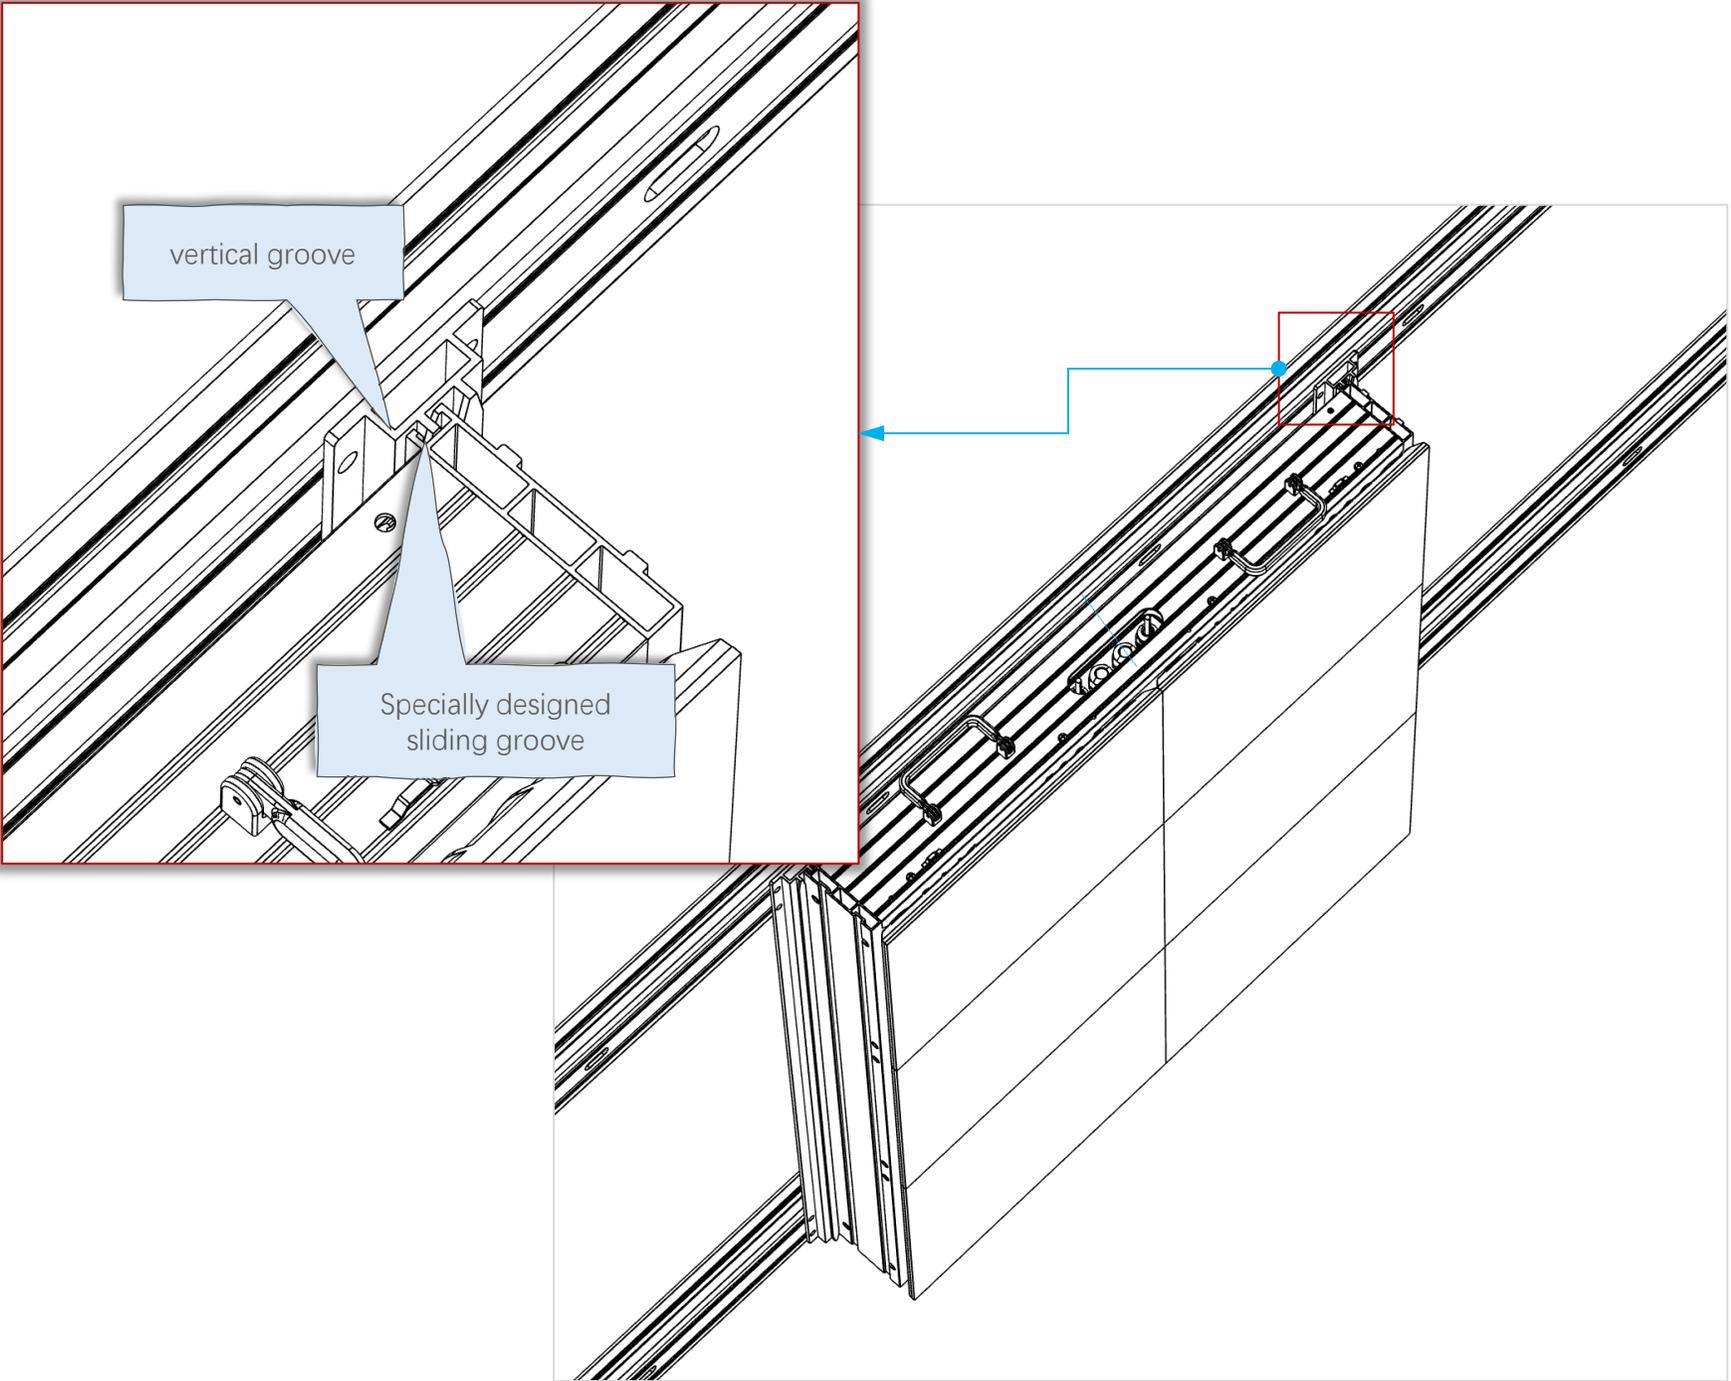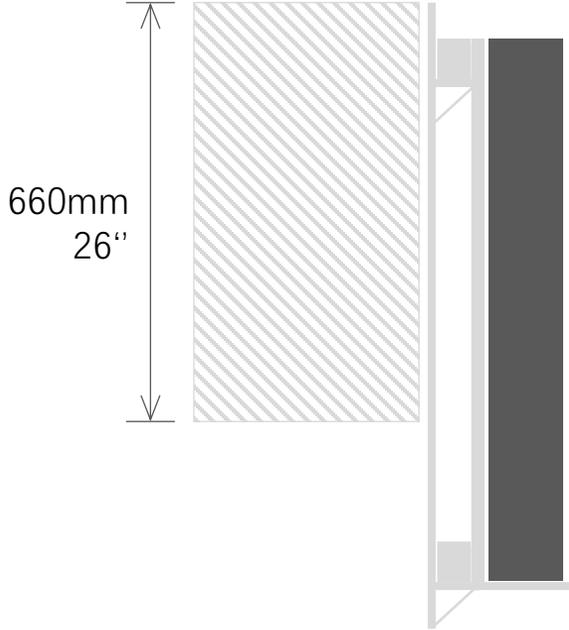

INSTALL THE CABINET

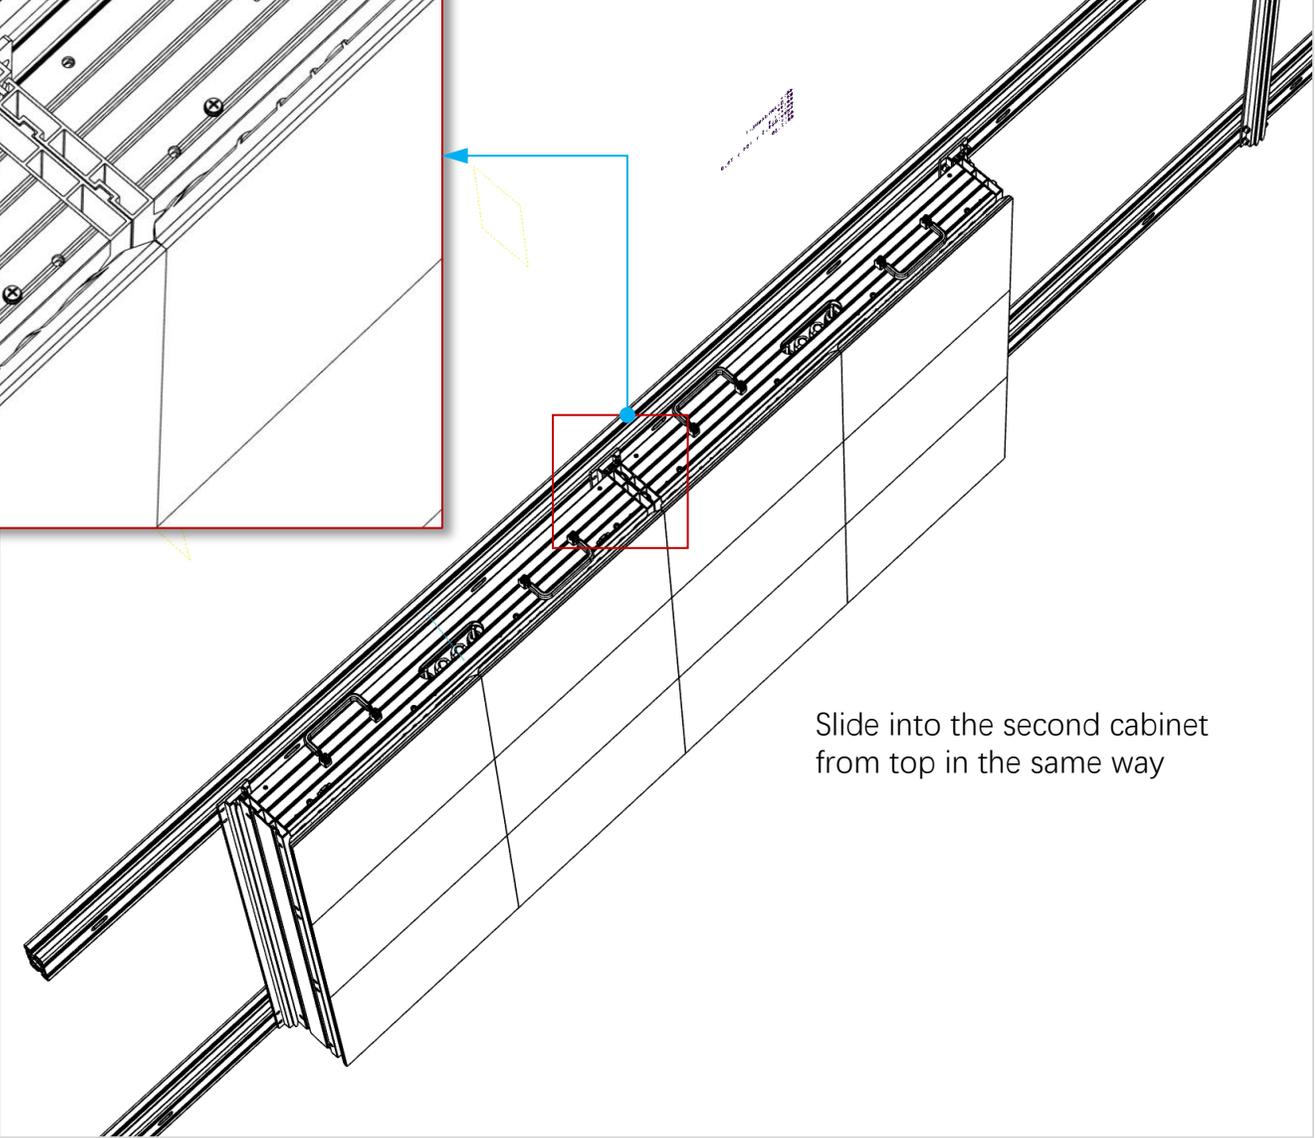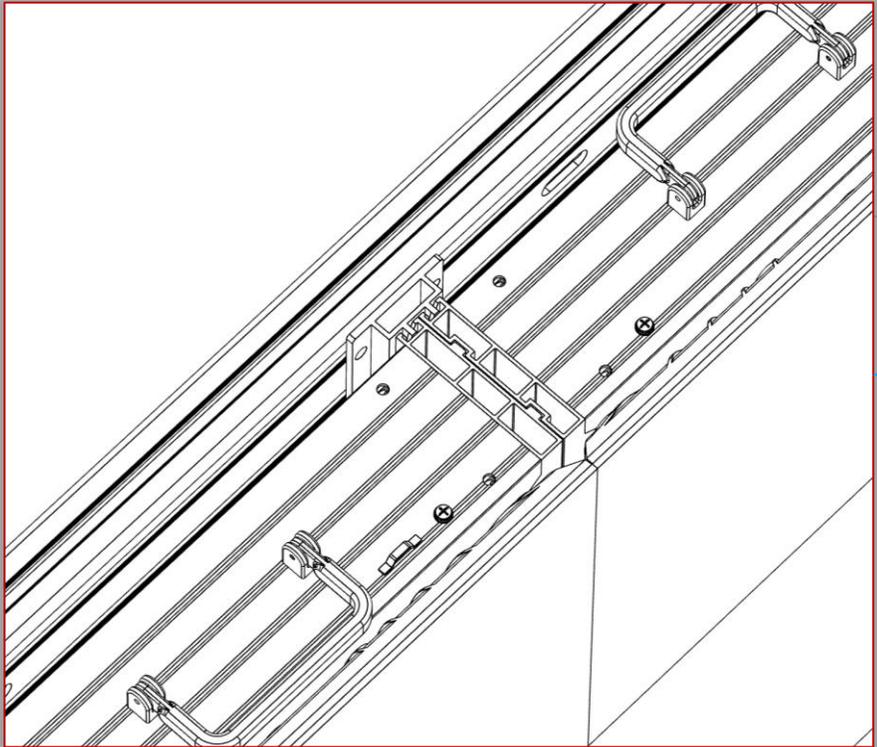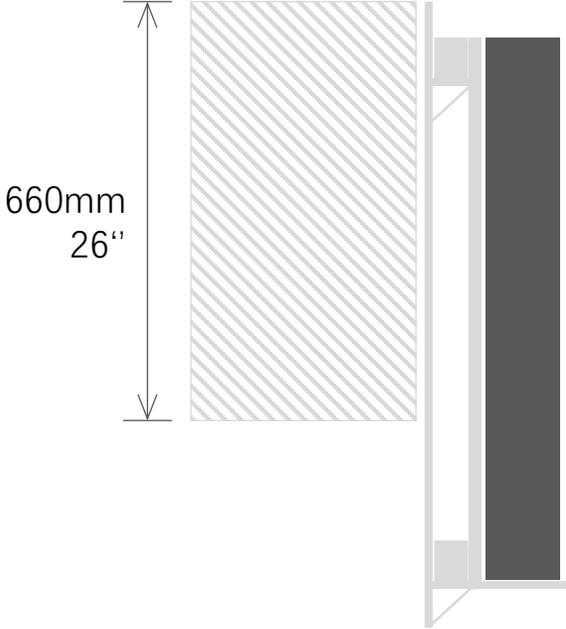

CABLE PROTECTION COVER

